
STEPS TO REVERSE CAM/ LOCK

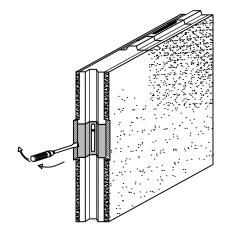

STEP - 1


Use a flat head screw driver to open the metal on each side of the cam-lock.

CAM/ LOCK

TO BE -ROTATE


<u>STEP - 2</u>

Insert screw driver in the center of the cam-lock to extract cam-lock & Rotate cam-lock 180º.

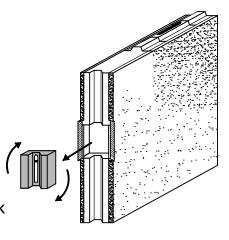

METAL

FINISH.

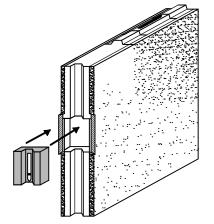

<u>STEP - 3</u>

Insert cam-lock back into the panel.

<u>STEP - 4</u>

Close metal to cover cam-lock. Use a flat surface (Example: 2x4 & a hammer) for a smooth edge finish.

